



# 1. LOCATE VALVE COVER



**2. REMOVE VALVE COVER  
TURNING BY HAND**



**3. SLOWLY ADJUST VALVE WITH FINGERNAIL OR SCREWDRIVER.**



**4. CHECK FLAME/PILOT STRENGTH & SET YOUR VALVE.**



**5. RE-ATTACH VALVE COVER/CAP BY HAND TIGHTENING.**



## **6. ADJUST FLAME w/ PROPANE WHEEL TO BEGIN TORCHING!**

**SCAN QR CODE FOR DEMO VIDEO INSTRUCTIONS  
AMPED EQUIPMENT HOT HEAD TORCH  
PILOT/FLAME CONTROL ADJUSTMENT.**

