
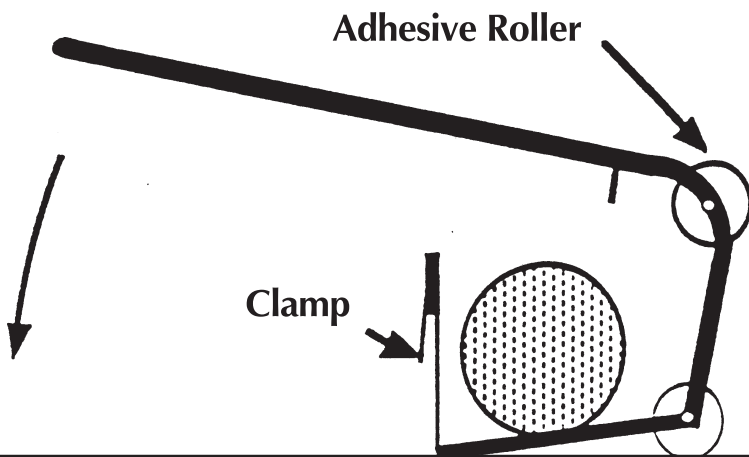


# The Better Spreader®

## 1. Prepare the Can

The can is turned on it's side and a row of 3/16" holes are drilled 3/4" on center.

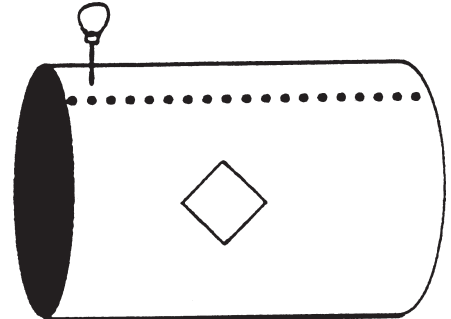

## 2. Secure the Can

With the can set in place, the handle is lowered and clamped securing the can.

An airhole is made in the lid allowing the adhesive to flow smoothly.

## 3. Start Gluing

The Better Spreader® is easily rolled to the application area utilizing the carriage wheels.

The unit is flipped into the adhesive roller to begin flue application.

