



**AMPED**  
EQUIPMENT



# Assembly Instructions for Amped Equipment

## Ultimate Pallet Hotbox Frame:



**Finished Frame ->**



Standard Elbow, Qty: 2

**Piece 1**



Corner Ass'y, Qty: 6


**Piece 2**

### Each assembly contains the following pole sections:

51.75" (Qty 4) Piece A

53.25" (Qty 4) Piece B

51.50" (Qty 3) Piece C

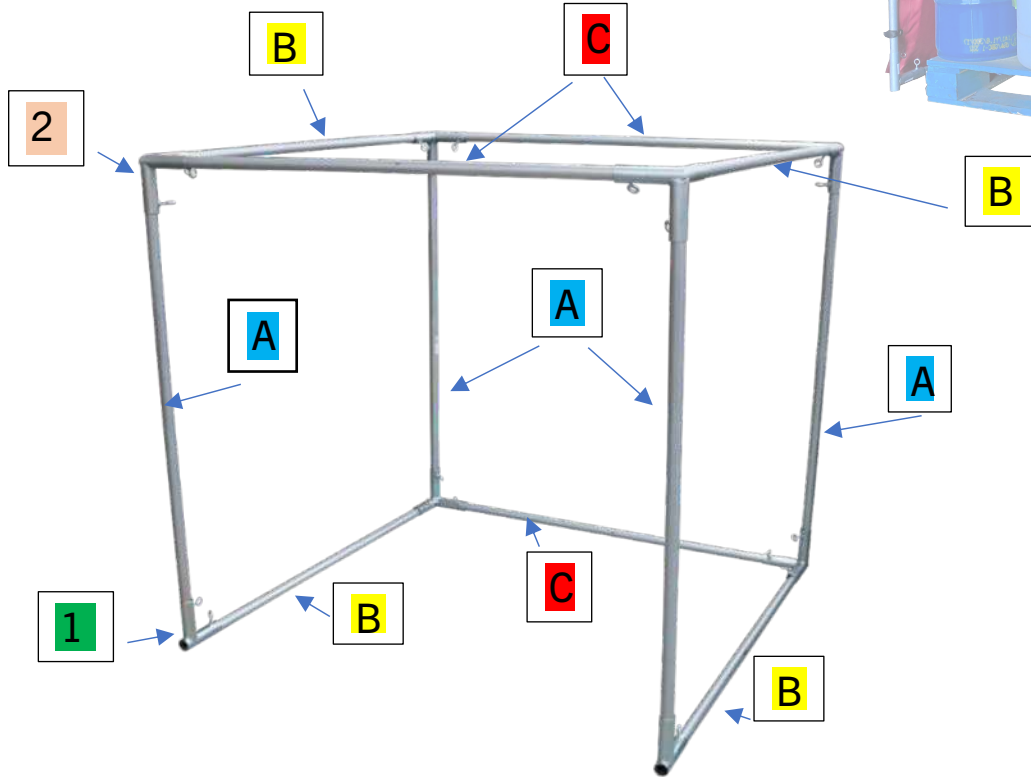

1. Insert tube sections (Lettered) into corner sections as shown, taking care to observe the different lengths.
2. Secure eyebolt-style screws on corner assemblies (Numbered) to hand tight. Do not over tighten as this may damage tube sections.
3. Attach roof support straps as shown below, spaced evenly, with buckles on the bottom.

